


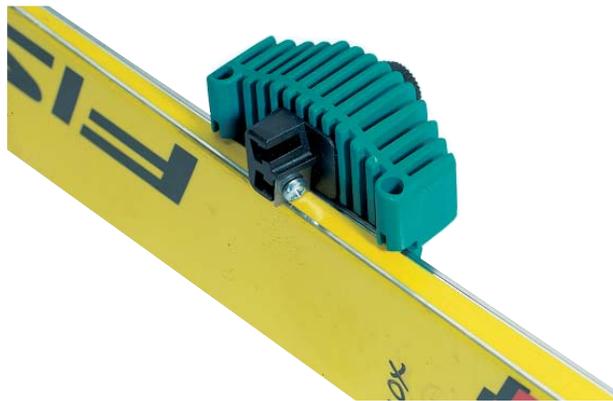

3132 SIDEWALL STRIPPER

Easy tool to reset or strip plastic sidewalls



The top tool for re-setting or stripping the plastic sidewalls on skis or snowboards. Replaceable tungsten carbide blade has 4 cutting edges. Square or radiused corners.

The blade can be precisely set for correct side and depth position.

Works with left or right hand.



TOOLS MFG. IN GERMANY


RUFFOLO, INC. 2926 75TH ST. KENOSHA, WI 53143 800-877-7025

VISIT THE FK/SKS TOOLS SITE
www.FKTOOLS-US.COM



3132 SIDEWALL STRIPPER

Easy tool to reset or strip plastic sidewalls

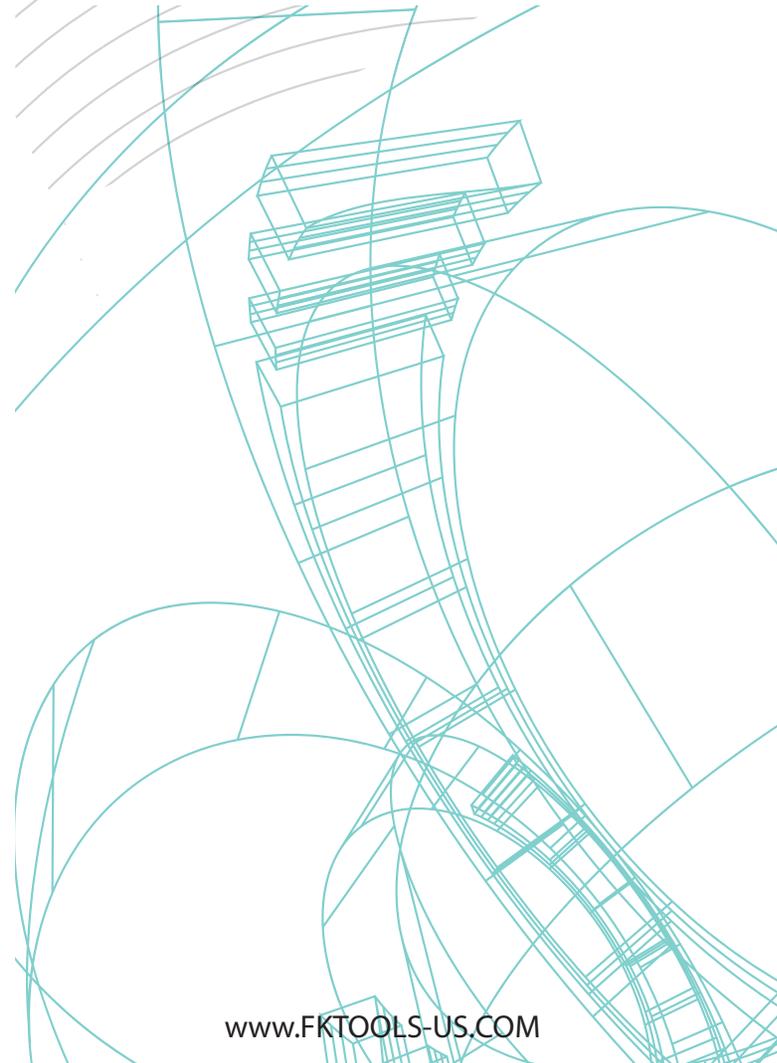

www.FKTOOLS-US.COM



Instructions for using the 3132 SIDEWALL STRIPPER

Always use the tool by pulling it toward you. The head of the knife holding screw "A" must point towards the direction of cutting. "B"

Set the position of the tungsten carbide cutting blade "C" by turning the knurled knob "D" counter-clockwise to move away from the ski edge and clockwise to move closer to the edge. Set the depth of the cut by turning the two screws "E".

You can change the shape of the sidewall cut by rotating the tungsten carbide blade "C" in its holder "F". Choose from radiused corner or square corner.

The tool has been designed for left or right hand use. To convert it to the selected side, remove the black cutter holder "F" by turning the knurled knob "D" to the left until you can pull out the black cutter holder "F". Turn the holder 180° and replace it into the tool. Move the cutting blade to the other slot in the holder "F".

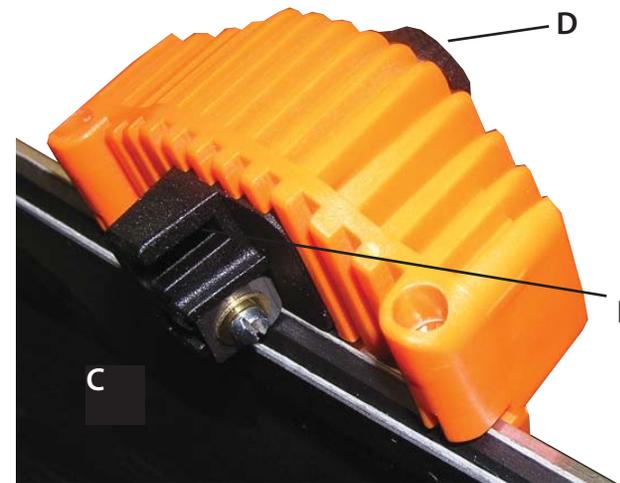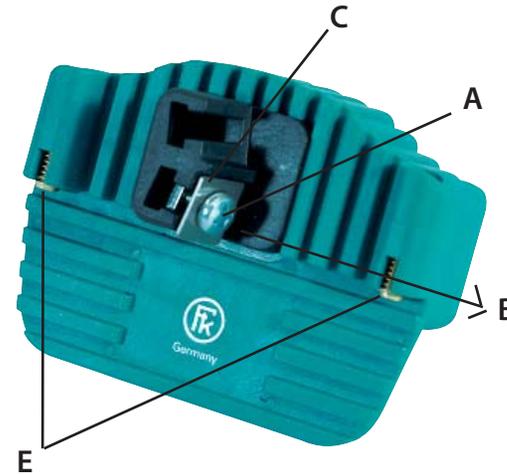

3134 Spare Tungsten Carbide Blade "C"

see Tuning tips online at
www.fktools-us.com/tooltips.asp